


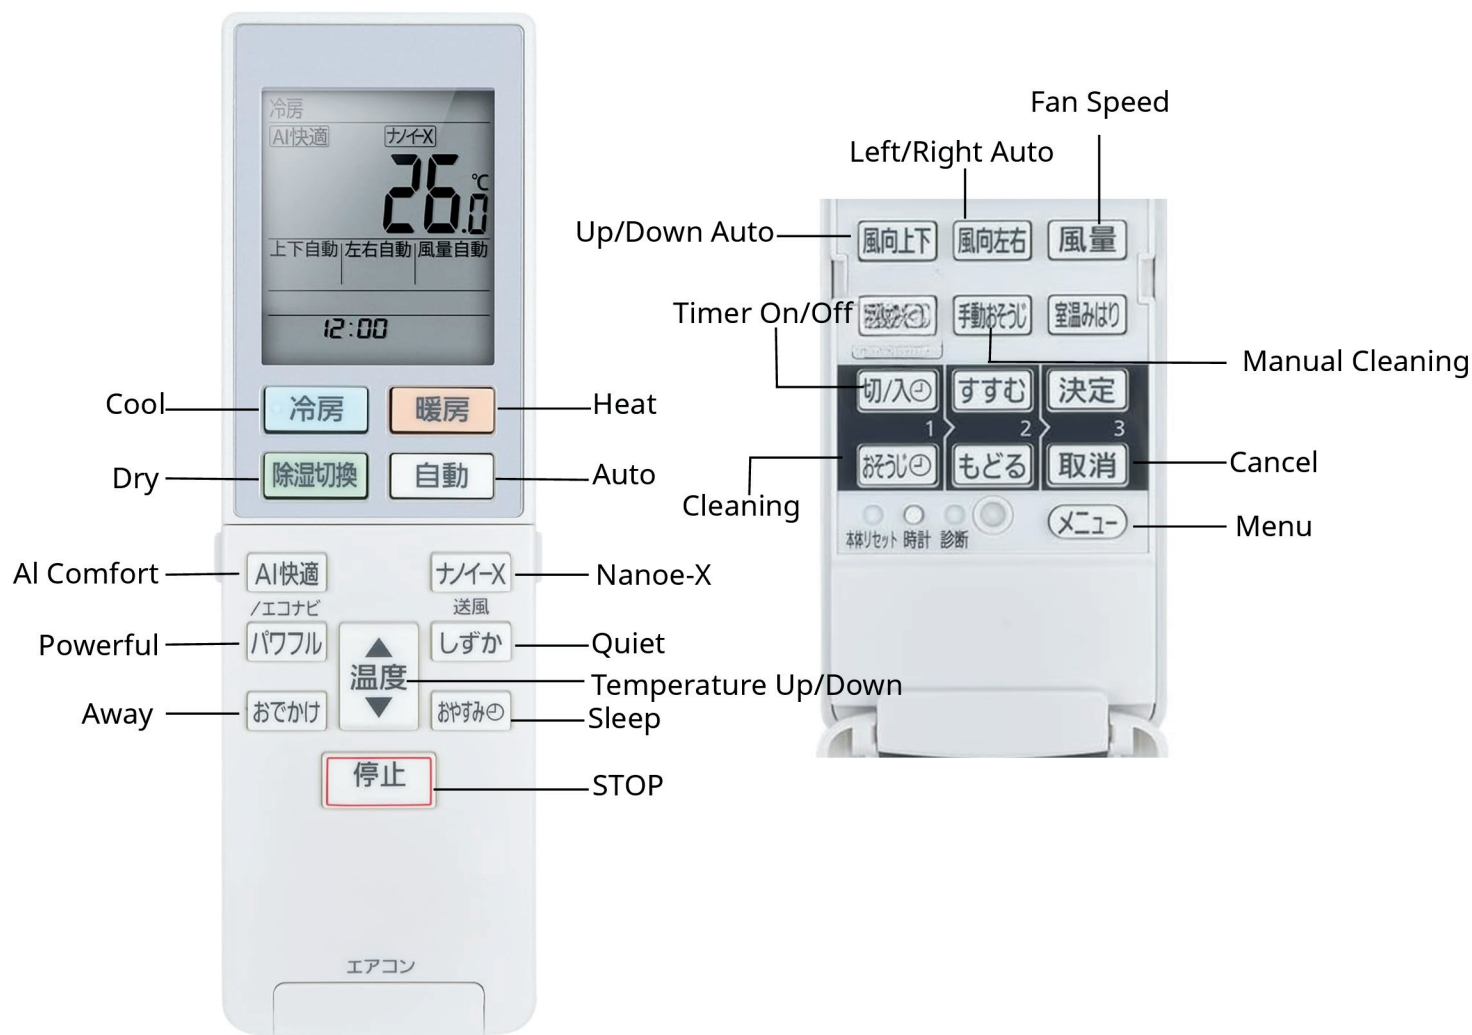


Quick Start

1. Select mode: 暖房 (Heat), 冷房 (Cool), etc...to Turn ON
2. Use 温度 ▲ / ▼ arrows to set temperature
3. Press 停止 (Stop/Off)

Important Notes:

1. In winter (heating mode), if you suddenly set the temperature much higher than the current room temperature (30°C at once), the air conditioner may not start heating immediately or seem ineffective.
2. Higher fan speed means more noise.
 - Solution: Use Auto or Quiet (しずか) mode for silent operation. If noise is too loud even on low, clean filters or check for unusual sounds (may need service). Quiet mode reduces fan speed and compressor noise significantly.

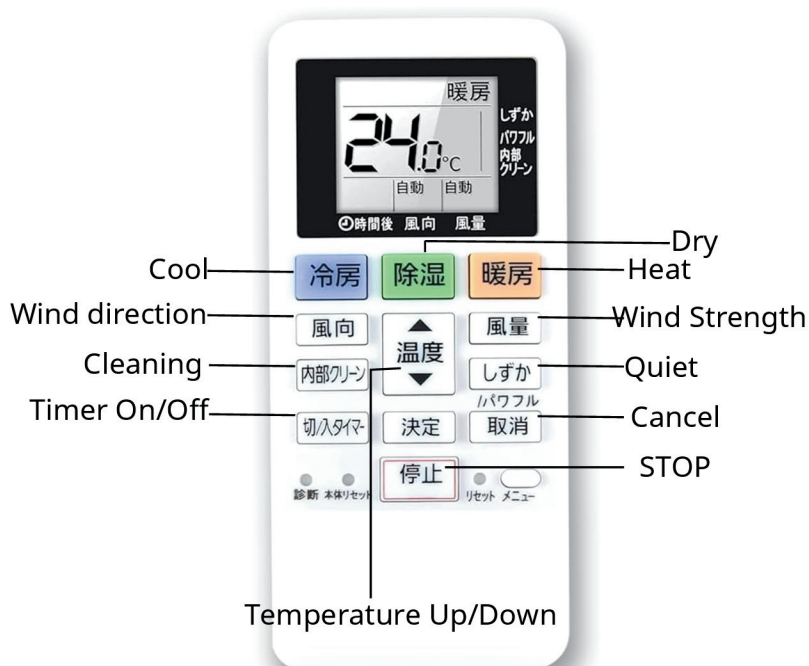

Quick Start

1. Select mode: 暖房 (Heat), 冷房 (Cool), etc...to Turn ON
2. Use 温度 ▲ / ▼ arrows to set temperature
3. Press 停止 (Stop/Off)

Important Notes:

1. In winter (heating mode), if you suddenly set the temperature much higher than the current room temperature (30°C at once), the air conditioner may not start heating immediately or seem ineffective.
2. Higher fan speed means more noise.
 - Solution: Use Auto or Quiet (しずか) mode for silent operation. If noise is too loud even on low, clean filters or check for unusual sounds (may need service). Quiet mode reduces fan speed and compressor noise significantly.